



**SONY**

Def.  
Ext 5

3-755-905-31 (1)

English

Français

# *Time Lapse Video Cassette Recorder*

*Operating Instructions*

*Mode d'emploi*

SVT-100

# Overview of the VCR

## Field recording/field playback

Because single fields can be recorded one by one in time lapse mode and all fields can be viewed separately during playback, you can record more information.

## Audio recording in 12-/24-mode

You can record audio information with video information even in 12- or 24-hour mode and listen to it by selecting audio mode during playback.

## Various recording functions

- **Autorepeat recording:** When the tape reaches the end, the VCR rewinds the tape and starts recording again from the beginning of the tape.
- **Timer recording:** You can set the timer on daily recording or weekly recording.
- **Alarm recording:** If an externally connected alarm sensor is triggered, you can make a complete recording of the situation that triggered the alarm.

## Used time indicator

This VCR has a built-in microprocessor equipped with a calendar function and shows used time of head drum and power on time on the monitor screen.

## Alarm scan function

You can scan the alarm recording and play it back for five seconds.

## Forward field advance

This VCR offers improved search functions with the ability to move forwards between fields.

## Clock operation backup

When a power interruption occurs, the built-in rechargeable battery will provide backup power for the clock for up to 72 hours.

Essential data, such as data setting, internal timer settings, recording time, and mode settings, are also retained.

## Security lock


To guard against operation errors, this VCR locks all of the buttons.

# Connections

Turn all the power off before making connections.  
Connect the AC power cord last.

## Connecting a camera, monitor and microphone

With the following connections, you can monitor the picture and sound.

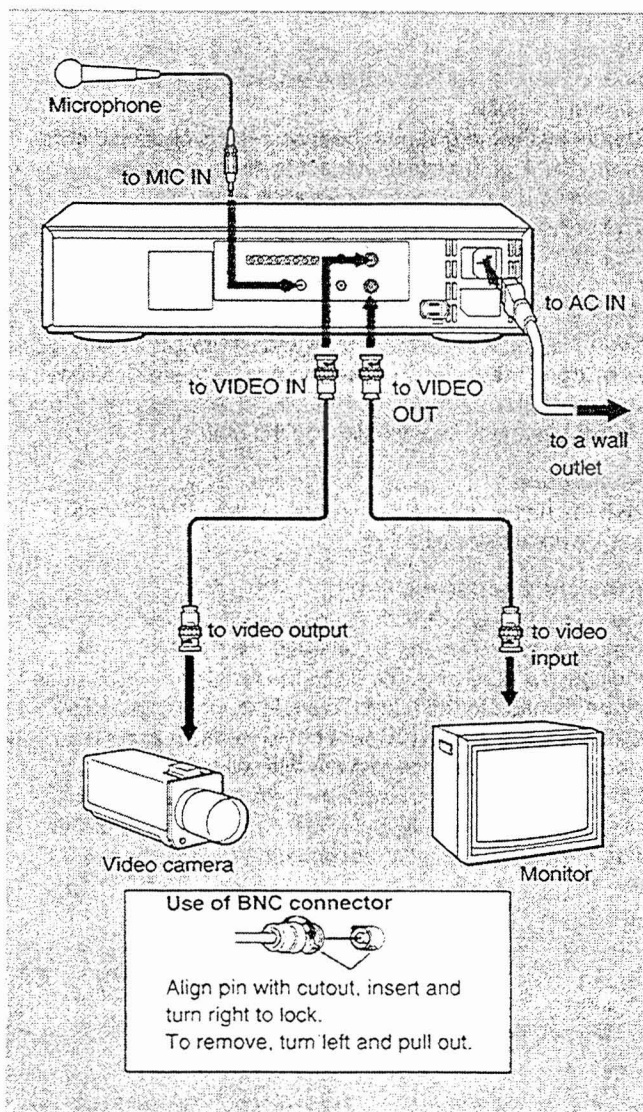

For alarm sensor connection, refer to page 13.